




ASSEMBLY INSTRUCTIONS BTV 1400 BG/SO/FW

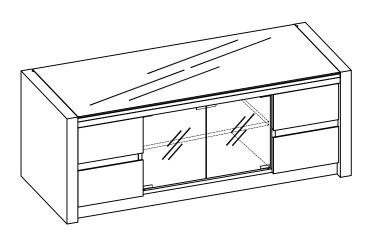


Thank you for choosing AVS BTV 1400 BG/SO/FW Furniture. Before beginning assembly, please check all parts are included and undamaged. For any assembly or parts enquiries, please contact AV Supply Group Ltd on (09) 2749172 or email to sales@avsupply.co.nz

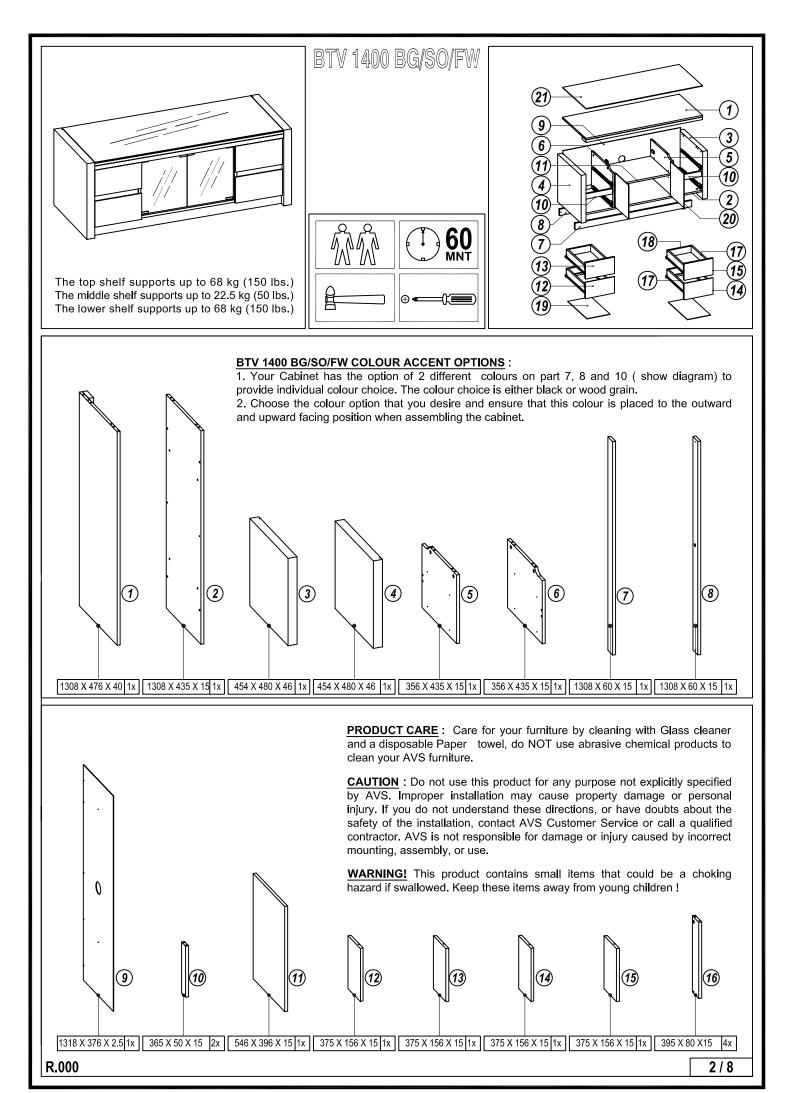

BTV 1400 BG/SO/FW

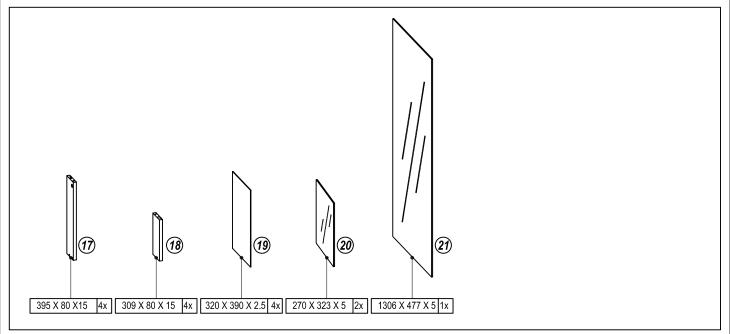

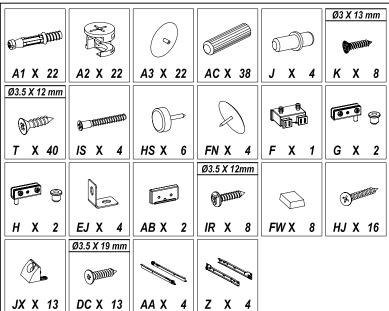


AV Supply Group (AVS) intend to make this manual accurate and complete. However, AVS makes no claim that the information contained herein covers all details, conditions, or variations. Nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. AVS makes no representation of warranty, expressed or implied, regarding the information contained herein. AVS assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

R.000

BTV 1400 BG/SO/FW (A1) 2 1 3 = AC AC F (10)3 ŢOP-(A1) (A1) AQ ⊕ FN (AC) (A) 4 ® (EJ) TOP-(T) (HS) 3 4 HS@ #A2 (A1) AC) ac) AC = \$ @ AC) G 2 AC C (A2) (AC) A2 AC EJ R **3**(A2) (AC) = HS D 8 AC) ° HS)© (HS) O (17)5 6 AC = (16) 4X (A) 15 (A2) (\$\vec{4}{3}) 2 (15)(A2) (A1) 7 R.000 4/8

BTV 1400 BG/SO/FW (13)HJ HJ (17)7 18 16 (16) (HJ (18) (17)(12)(16) (16) (16) (15)(17)H 8 (17)(H) (16) (18)<u>(16)</u> HJ *16*) (17)(16) (18)<u>(16)</u> (16) **P**OC **P**OC 10 9 T ŢŢ (JX 41 T T T T T (15)14) **13** 100 $\overline{(T)}$ R.000 5/8

BTV 1400 BG/SO/FW 11 12 (6)13 3 R 4 14 3 09 4 (K)• <u>(K)</u> 4 R.000 6/8

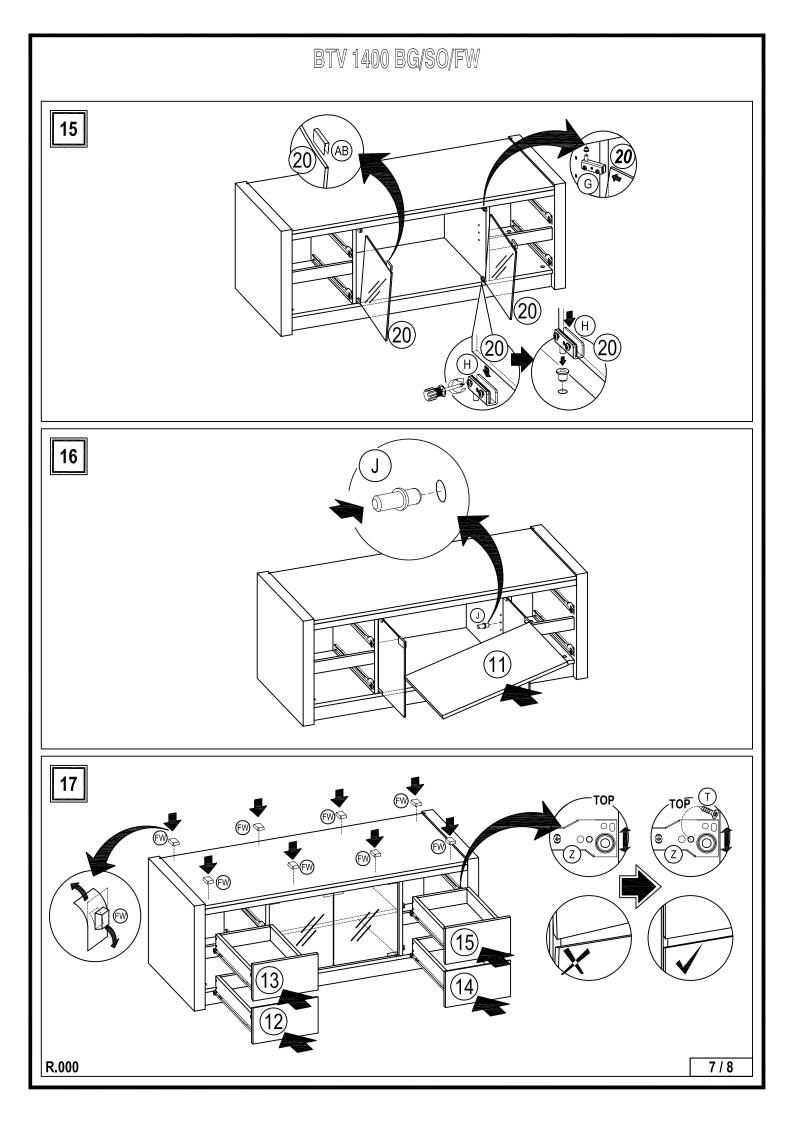

BTV 1400 BG/SO/FW 18 19 R.000 8/8